

**RESEAU 5**

Station: ARLON

Fréquence: 105.3 MHz

Position: 5°E49'25" 49°N41'03"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 00	60: 01	120: 06	180: 07	240: 04	300: 00
10: 00	70: 02	130: 06	190: 06	250: 03	310: 00
20: 00	80: 03	140: 06	200: 06	260: 03	320: 00
30: 00	90: 03	150: 06	210: 06	270: 02	330: 00
40: 00	100: 04	160: 07	220: 06	280: 01	340: 00
50: 01	110: 05	170: 07	230: 05	290: 01	350: 00

---

Station: ATH

Fréquence: 105.5 MHz

Position: 3°E45'52" 50°N37'36"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 14 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: AUBANGE

Fréquence: 105.7 MHz

Position: 5°E48'18" 49°N34'09"

Puissance: 25 W

Hauteur de l'antenne au-dessus du sol: 32 m

Diagramme directionnel de l'antenne:

0: 01	60: 05	120: 07	180: 05	240: 01	300: 00
10: 01	70: 06	130: 07	190: 04	250: 00	310: 00
20: 02	80: 06	140: 06	200: 03	260: 00	320: 00
30: 03	90: 06	150: 06	210: 03	270: 00	330: 00
40: 03	100: 06	160: 06	220: 02	280: 00	340: 00
50: 04	110: 07	170: 06	230: 01	290: 00	350: 00

---

Station: BASTOGNE

Fréquence: 106.4 MHz

Position: 5°E39'00" 49°N58'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

**RESEAU 5**

Station: BEAURAING

Fréquence: 107.1 MHz

Position: 4°E56'20" 50°N05'22"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 19 m

Diagramme directionnel de l'antenne:

0: 16	60: 16	120: 13	180: 01	240: 03	300: 16
10: 16	70: 16	130: 10	190: 00	250: 05	310: 16
20: 16	80: 16	140: 07	200: 00	260: 07	320: 16
30: 16	90: 16	150: 05	210: 00	270: 10	330: 16
40: 16	100: 16	160: 03	220: 01	280: 13	340: 16
50: 16	110: 16	170: 02	230: 02	290: 16	350: 16

---

Station: BERTRIX

Fréquence: 107.3 MHz

Position: 5°E15'16" 49°N51'21"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 43 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: BIERGES

Fréquence: 106.6 MHz

Position: 4°E35'30" 50°N42'30"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 15 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: BOUILLON

Fréquence: 99.0 MHz

Position: 5°E04'42" 49°N48'03"

Puissance: 2500 W

Hauteur de l'antenne au-dessus du sol: 40 m

Diagramme directionnel de l'antenne:

0: 00	60: 01	120: 06	180: 07	240: 04	300: 00
10: 00	70: 02	130: 06	190: 06	250: 03	310: 00
20: 00	80: 03	140: 06	200: 06	260: 03	320: 00
30: 00	90: 03	150: 06	210: 06	270: 02	330: 00
40: 00	100: 04	160: 07	220: 06	280: 01	340: 00
50: 01	110: 05	170: 07	230: 05	290: 01	350: 00

**RESEAU 5**

Station: BRUXELLES

Fréquence: 104.7 MHz

Position: 4°E20'39" 50°N49'22"

Puissance: 1600 W

Hauteur de l'antenne au-dessus du sol: 50 m

Diagramme directionnel de l'antenne:

0: 20	60: 09	120: 00	180: 15	240: 20	300: 20
10: 20	70: 06	130: 01	190: 20	250: 20	310: 20
20: 20	80: 03	140: 03	200: 20	260: 20	320: 20
30: 20	90: 01	150: 06	210: 20	270: 20	330: 20
40: 15	100: 00	160: 09	220: 20	280: 20	340: 20
50: 10	110: 00	170: 10	230: 20	290: 20	350: 20

---

Station: CHAPELLE-HERLAIMONT

Fréquence: 104.8 MHz

Position: 4°E17'08" 50°N28'12"

Puissance: 300 W

Hauteur de l'antenne au-dessus du sol: 24 m

Diagramme directionnel de l'antenne:

0: 06	60: 03	120: 00	180: 00	240: 02	300: 06
10: 06	70: 03	130: 00	190: 00	250: 03	310: 06
20: 06	80: 02	140: 00	200: 00	260: 03	320: 06
30: 06	90: 01	150: 00	210: 00	270: 04	330: 07
40: 05	100: 01	160: 00	220: 01	280: 05	340: 07
50: 04	110: 00	170: 00	230: 01	290: 06	350: 07

---

Station: CHARLEROI

Fréquence: 103.5 MHz

Position: 4°E25'17" 50°N23'18"

Puissance: 2000 W

Hauteur de l'antenne au-dessus du sol: 58 m

Diagramme directionnel de l'antenne:

0: 08	60: 08	120: 00	180: 00	240: 00	300: 10
10: 08	70: 08	130: 00	190: 00	250: 00	310: 10
20: 09	80: 08	140: 00	200: 00	260: 00	320: 14
30: 09	90: 00	150: 00	210: 00	270: 00	330: 15
40: 09	100: 00	160: 00	220: 00	280: 03	340: 16
50: 08	110: 00	170: 00	230: 00	290: 04	350: 08

---

Station: CHIMAY

Fréquence: 89.0 MHz

Position: 4°E18'57" 50°N02'35"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 25 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

**RESEAU 5**

Station: CLABECQ-TUBIZE

Fréquence: 106.3 MHz

Position: 4°E12'36" 50°N41'05"

Puissance: 2000 W

Hauteur de l'antenne au-dessus du sol: 9 m

Diagramme directionnel de l'antenne:

0: 08	60: 03	120: 00	180: 00	240: 03	300: 09
10: 06	70: 02	130: 00	190: 00	250: 03	310: 06
20: 06	80: 01	140: 00	200: 00	260: 04	320: 07
30: 05	90: 01	150: 00	210: 01	270: 05	330: 07
40: 04	100: 00	160: 00	220: 01	280: 09	340: 09
50: 03	110: 00	170: 00	230: 02	290: 09	350: 08

---

Station: COMINES

Fréquence: 107.8 MHz

Position: 3°E00'15" 50°N45'58"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 06	60: 07	120: 04	180: 00	240: 00	300: 01
10: 06	70: 06	130: 03	190: 00	250: 00	310: 02
20: 06	80: 06	140: 03	200: 00	260: 00	320: 03
30: 06	90: 06	150: 02	210: 00	270: 00	330: 03
40: 07	100: 06	160: 01	220: 00	280: 00	340: 04
50: 07	110: 05	170: 01	230: 00	290: 01	350: 05

---

Station: COURT-ST-ETIENNE

Fréquence: 102.9 MHz

Position: 4°E34'07" 50°N38'37"

Puissance: 80 W

Hauteur de l'antenne au-dessus du sol: 29 m

Diagramme directionnel de l'antenne:

0: 06	60: 06	120: 03	180: 00	240: 00	300: 03
10: 06	70: 06	130: 02	190: 00	250: 00	310: 03
20: 07	80: 06	140: 01	200: 00	260: 00	320: 04
30: 07	90: 05	150: 01	210: 00	270: 01	330: 05
40: 07	100: 04	160: 00	220: 00	280: 01	340: 06
50: 06	110: 03	170: 00	230: 00	290: 02	350: 06

---

Station: COUVIN

Fréquence: 107.2 MHz

Position: 4°E31'37" 50°N03'53"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

**RESEAU 5**

Station: DINANT

Fréquence: 106.3 MHz

Position: 4°E54'51" 50°N14'42"

Puissance: 200 W

Hauteur de l'antenne au-dessus du sol: 12 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: DURBUY

Fréquence: 105.3 MHz

Position: 5°E28'02" 50°N23'08"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 20 m

Diagramme directionnel de l'antenne:

0: 07	60: 06	120: 01	180: 00	240: 00	300: 04
10: 07	70: 05	130: 01	190: 00	250: 01	310: 05
20: 07	80: 04	140: 00	200: 00	260: 01	320: 06
30: 06	90: 03	150: 00	210: 00	270: 02	330: 06
40: 06	100: 03	160: 00	220: 00	280: 03	340: 06
50: 06	110: 02	170: 00	230: 00	290: 03	350: 06

---

Station: FRAMERIES

Fréquence: 94.9 MHz

Position: 3°E53'16" 50°N23'07"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 49 m

Diagramme directionnel de l'antenne:

0: 02	60: 16	120: 16	180: 16	240: 16	300: 02
10: 03	70: 16	130: 16	190: 16	250: 13	310: 01
20: 05	80: 16	140: 16	200: 16	260: 10	320: 00
30: 07	90: 16	150: 16	210: 16	270: 07	330: 00
40: 10	100: 16	160: 16	220: 16	280: 05	340: 00
50: 13	110: 16	170: 16	230: 16	290: 03	350: 01

---

Station: HAVRE

Fréquence: 104.9 MHz

Position: 4°E02'26" 50°N29'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 32 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

**RESEAU 5**

Station: HEUSY

Fréquence: 106.8 MHz

Position: 5°E51'36" 50°N35'34"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: JUPILLE-SUR-MEUSE

Fréquence: 107.8 MHz

Position: 5°E37'28" 50°N37'48"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 03	310: 00
20: 00	80: 00	140: 00	200: 00	260: 03	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: LIEGE

Fréquence: 99.0 MHz

Position: 5°E33'12" 50°N34'46"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 75 m

Diagramme directionnel de l'antenne:

0: 07	60: 00	120: 07	180: 16	240: 16	300: 16
10: 05	70: 00	130: 10	190: 16	250: 16	310: 16
20: 03	80: 01	140: 13	200: 16	260: 16	320: 16
30: 02	90: 02	150: 16	210: 16	270: 16	330: 16
40: 01	100: 03	160: 16	220: 16	280: 16	340: 13
50: 00	110: 05	170: 16	230: 16	290: 16	350: 10

---

Station: MARCHE

Fréquence: 105.9 MHz

Position: 5°E20'42" 50°N12'03"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 24 m

Diagramme directionnel de l'antenne:

0: 06	60: 03	120: 00	180: 00	240: 02	300: 06
10: 06	70: 03	130: 00	190: 00	250: 03	310: 06
20: 06	80: 02	140: 00	200: 00	260: 03	320: 06
30: 06	90: 01	150: 00	210: 00	270: 04	330: 07
40: 05	100: 01	160: 00	220: 01	280: 05	340: 07
50: 04	110: 00	170: 00	230: 01	290: 06	350: 07

**RESEAU 5**

Station: NAMUR

Fréquence: 104.7 MHz

Position: 4°E51'43" 50°N27'36"

Puissance: 5000 W

Hauteur de l'antenne au-dessus du sol: 38 m

Diagramme directionnel de l'antenne:

0: 02	60: 00	120: 00	180: 03	240: 06	300: 06
10: 01	70: 00	130: 00	190: 04	250: 07	310: 06
20: 01	80: 00	140: 01	200: 05	260: 07	320: 05
30: 00	90: 00	150: 01	210: 06	270: 07	330: 04
40: 00	100: 00	160: 02	220: 06	280: 06	340: 03
50: 00	110: 00	170: 03	230: 06	290: 06	350: 03

---

Station: NIVELLES

Fréquence: 94.2 MHz

Position: 4°E19'30" 50°N36'00"

Puissance: 250 W

Hauteur de l'antenne au-dessus du sol: 18 m

Diagramme directionnel de l'antenne:

0: 14	60: 06	120: 01	180: 00	240: 00	300: 04
10: 14	70: 05	130: 01	190: 00	250: 01	310: 05
20: 13	80: 04	140: 00	200: 00	260: 01	320: 06
30: 09	90: 03	150: 00	210: 00	270: 02	330: 06
40: 09	100: 03	160: 00	220: 00	280: 03	340: 09
50: 06	110: 02	170: 00	230: 00	290: 03	350: 11

---

Station: OIGNIES

Fréquence: 104.7 MHz

Position: 4°E37'55" 50°N01'40"

Puissance: 5000 W

Hauteur de l'antenne au-dessus du sol: 38 m

Diagramme directionnel de l'antenne:

0: 04	60: 00	120: 00	180: 01	240: 06	300: 07
10: 03	70: 00	130: 00	190: 02	250: 06	310: 06
20: 03	80: 00	140: 00	200: 03	260: 06	320: 06
30: 02	90: 00	150: 00	210: 03	270: 06	330: 06
40: 01	100: 00	160: 00	220: 04	280: 07	340: 06
50: 01	110: 00	170: 01	230: 05	290: 07	350: 05

---

Station: OSTICHES

Fréquence: 94.4 MHz

Position: 3°E46'00" 50°N39'53"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 18 m

Diagramme directionnel de l'antenne:

0: 20	60: 03	120: 03	180: 20	240: 20	300: 20
10: 20	70: 01	130: 06	190: 20	250: 20	310: 20
20: 15	80: 00	140: 09	200: 20	260: 20	320: 20
30: 10	90: 00	150: 10	210: 20	270: 20	330: 20
40: 09	100: 00	160: 15	220: 20	280: 20	340: 20
50: 06	110: 01	170: 20	230: 20	290: 20	350: 20

**RESEAU 5**

Station: REMICOURT

Fréquence: 106.4 MHz

Position: 5°E22'27" 50°N41'15"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 24 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: ROCHEFORT

Fréquence: 98.8 MHz

Position: 5°E04'05" 50°N14'10"

Puissance: 300 W

Hauteur de l'antenne au-dessus du sol: 36 m

Diagramme directionnel de l'antenne:

0: 03	60: 00	120: 00	180: 03	240: 06	300: 06
10: 02	70: 00	130: 00	190: 03	250: 06	310: 06
20: 01	80: 00	140: 00	200: 04	260: 07	320: 06
30: 01	90: 00	150: 01	210: 05	270: 07	330: 05
40: 00	100: 00	160: 01	220: 06	280: 07	340: 04
50: 00	110: 00	170: 02	230: 06	290: 06	350: 03

---

Station: TOURNAI

Fréquence: 106.5 MHz

Position: 3°E24'19" 50°N39'18"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 10 m

Diagramme directionnel de l'antenne:

0: 16	60: 13	120: 01	180: 03	240: 16	300: 16
10: 16	70: 10	130: 00	190: 05	250: 16	310: 16
20: 16	80: 07	140: 00	200: 07	260: 16	320: 16
30: 16	90: 05	150: 00	210: 10	270: 16	330: 16
40: 16	100: 03	160: 01	220: 13	280: 16	340: 16
50: 16	110: 02	170: 02	230: 16	290: 16	350: 16

---

Station: VINALMONT

Fréquence: 104.8 MHz

Position: 5°E13'45" 50°N34'05"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 06	60: 02	120: 00	180: 00	240: 03	300: 06
10: 06	70: 01	130: 00	190: 00	250: 04	310: 07
20: 05	80: 01	140: 00	200: 01	260: 05	320: 07
30: 04	90: 00	150: 00	210: 01	270: 06	330: 07
40: 03	100: 00	160: 00	220: 02	280: 06	340: 06
50: 03	110: 00	170: 00	230: 03	290: 06	350: 06



**RESEAU 5**

Station: WALCOURT

Fréquence: 106.4 MHz

Position: 4°E28'00" 50°N13'00"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 06	60: 06	120: 02	180: 00	240: 00	300: 03
10: 07	70: 06	130: 01	190: 00	250: 00	310: 04
20: 07	80: 05	140: 01	200: 00	260: 01	320: 05
30: 07	90: 04	150: 00	210: 00	270: 01	330: 06
40: 06	100: 03	160: 00	220: 00	280: 02	340: 06
50: 06	110: 03	170: 00	230: 00	290: 03	350: 06

---

Station: WATERLOO

Fréquence: 106.9 MHz

Position: 4°E24'09" 50°N42'41"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---

Station: WELKENRAEDT

Fréquence: 107.3 MHz

Position: 5°E57'49" 50°N39'30"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 25 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

---